


FILTREXX® LOCKDOWN NETTING™

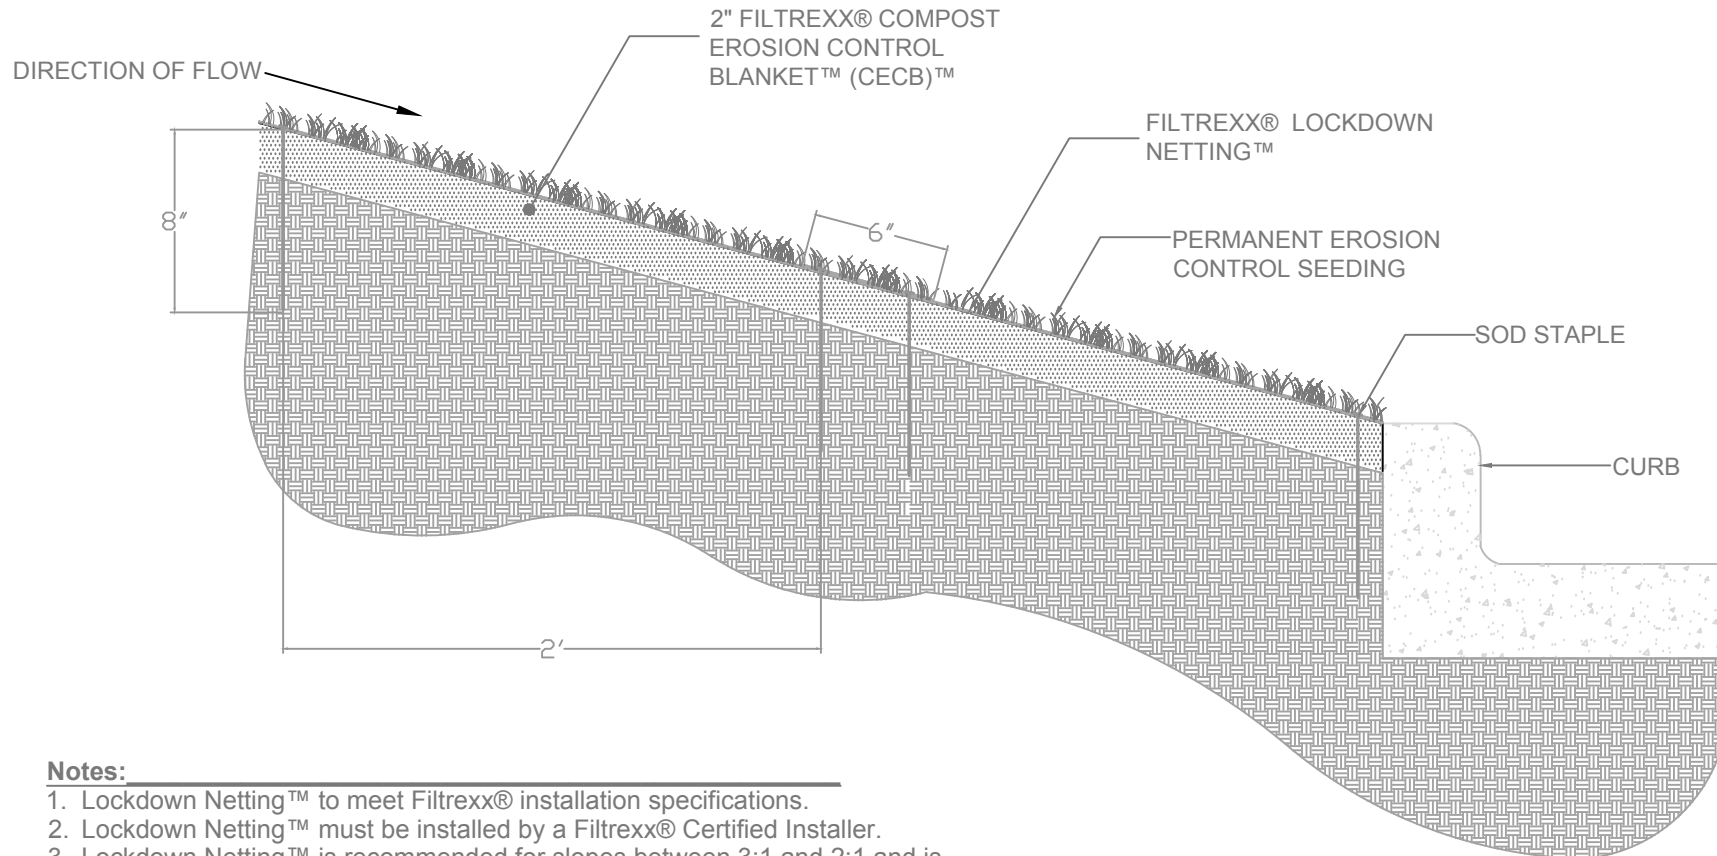

Section View

Notes:

1. Lockdown Netting™ to meet Filtrex® installation specifications.
2. Lockdown Netting™ must be installed by a Filtrex® Certified Installer.
3. Lockdown Netting™ is recommended for slopes between 3:1 and 2:1 and is required for slopes greater than 2:1.
4. Lockdown Netting™ is not sufficient to be used alone as a form of slope stabilization or erosion control; Lockdown Netting™ shall be installed prior to the application of CECB™.
5. Lockdown Netting™ shall be anchored to the soil using 8" sod staples to be driven along the entire perimeter of the netting area.
6. Staples for Lockdown Netting™ shall be spaced no more than 24" apart on all sides.
7. Where more than one roll of Lockdown Netting™ is required for slope length or slope width, netting edges shall be overlapped by a minimum of 6".
8. Lockdown Netting™ shall be installed from top to bottom (never across) on the slope.
9. Lockdown Netting™ shall be installed under the entire area of the CECB™, including 10 feet over the shoulder of the slope.